




# Assembly Instructions

## K16

### Parts:

- (1) 001-001-000005-00 10" Steel Spider
- (1) 001-002-000009-01 K Style Column
- (1) 001-003-000001-00 27 1/8" x 5/8" Bolt
- (1) 001-006-000001-00 5/8" Nut
- (1) 001-005-120148-01 16" K Base Plate
- (4) 001-004-000001-00 1/2" Plastic Glides
- (8) 001-007-000001-00 #12 x 3/4" Screws

**Warning: Screws provided are for tops at least 1" thick**

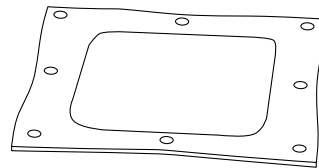

1. Thread bolt onto spider.
2. Place bolt through column and base plate.
3. Thread nut onto bolt under the base plate and tighten.

**Hint: Turn base upside down to assemble**

